

## Tecsun PL-880 Hidden Features Reference - Firmware 8820

FUNCTION	WHAT DOES IT DO?	RADIO STATE	WHAT KEY?	WHAT BANDS?	WHAT MODES?	WHAT DO I NEED TO DO?
<b>Synchronous Detection</b>	Enables the Synchronous Detector	ON	USB/NORM LSB/NORM	AM (MW, LW) SW	USB,LSB	1. Press and hold the 'USB/NORM' or 'LSB/NORM' key until 'SYNC' appears 2. Press the key again once to change back
<b>Additional Features</b>	Enables Muting Threshold & DNR features for MW, LW & SW	ON	4	AM (MW, LW) SW	AM, USB, LSB,SYNC	<i>Hint: The Additional Features key '4' MUST be set to 'ON' before the Muting Threshold (Key '9') or DNR (Key '6') will work on MW, LW &amp; SW.</i> Press and hold key '4' to toggle Additional Features "ON" and "OFF"
<b>DNR</b>	Enables Dynamic Noise Reduction	ON	6	AM (MW, LW) SW	AM, USB, LSB,SYNC	<i>Hint: The Additional Features key '4' MUST be enabled before this will work. DNR auto adjusts bandwidth.</i> Press and hold key '6' to toggle DNR "ON" and "OFF"
<b>Muting Threshold</b>	Allows adjustment of the squelch threshold, reducing the muting of weak stations	ON	9	FM AM (MW, LW) SW	FM AM USB LSB SYNC	<i>Hint: The Additional Features key '4' MUST be enabled before this will work on MW, LW or SW.</i> 1. Select a band/mode (FM, AM, SW, USB/LSB or SYNC), each band/mode has its own setting 2. Press and hold key '9' until the current level flashes in the main display area 3. Adjust with either tuning knob (the best setting should be '00') 4. Press key '9' to save
<b>FM De-emphasis</b>	Alters the time setting for FM De-emphasis	ON	5	FM	FM	Press and hold key '5' to toggle between '75.US' (USA Setting) and '50.US' (European Setting)
<b>Line Output Level</b>	Adjusts the audio level on the line output socket	ON	7	FM AM (MW, LW)	AM USB LSB SYNC	<i>Hint: This setting does not work on SW, only FM, MW &amp; LW. You will notice FM &amp; AM (MW, LW) have independent line output level settings. This setting also affects the current volume level setting.</i> 1. Press and hold key '7' until the current level flashes in the main display area 2. Adjust this setting with either tuning knob 3. Press key '7' to save
<b>Calibrate USB/LSB</b>	Allows calibration of each sideband	ON	SNOOZE	AM (MW, LW) SW	USB LSB	<i>Hint: Although this may calibrate USB &amp; LSB for the displayed band, you may find that on a different frequency band you have to recalibrate. You can carry out this procedure on USB or LSB as each sideband has its own calibration value.</i> 1. Tune in a strong AM (MW, LW) or SW station 2. Press 'USB/NORM' to switch to upper sideband 3. Adjust the fine tuning until it's zero-beated and the pitch matches AM 4. Press and hold the 'SNOOZE' key until the '00' correction value appears, calibration is now complete
<b>External antenna on MW or LW</b>	Switch from the internal MW & LW ferrite antenna to the external 'SW ANT' antenna socket	ON	VARIOUS	AM (MW, LW)	AM USB LSB SYNC	<i>Hint: In most cases a 'RESET' was required to get this feature to work correctly on firmware 8820. You can only tune upwards with the tuning knob or it will jump to 29999kHz, so set the frequency correctly before proceeding. You may also notice a leading '0' is added to the frequency if it's below 1000kHz and 'SW' appears on the display. This looks like it's actually extending the SW band below 1711kHz. Only the main tuning knob will tune upwards if in USB/LSB/SYNC modes. Use the main tuning knob in AM mode for 5kHz steps or the fine tuning for 1kHz steps (same step sizes as SW).</i> 1. Switch to MW or LW (AM) and tune to a frequency of your choice 2. Press 'USB/NORM' (USB mode on) 3. Press the 'AM' key ONCE (or TWICE if the LW feature is enabled, or you will end up on the wrong band) 4. Press 'USB/NORM' key (USB mode off) 5. Press the 'FM' key (Don't worry about the frequency) 6. Press the 'USB/NORM' key (USB mode on) 7. Press the 'USB/NORM' key again (USB mode off) You can now toggle between the internal and external antenna by pressing 'AM' and either of the 'SW' keys. To return to normal operation tune down on either tuning knobs.
<b>Firmware version and date</b>	Display the radio firmware version and date	OFF	AM BW	N/A	N/A	1. Press and hold 'AM BW' until the display turns on all of the LCD segments, then release it 2. Press and hold 'AM BW' again to get the firmware version, then release it 3. Press and hold 'AM BW' one more time for the firmware date, then release it
<b>Seconds on clock</b>	Add seconds to the clock	OFF	8	N/A	N/A	Press and hold key '8' to toggle the seconds ON and OFF
<b>Display light</b>	Toggles the display light ON (AUTO) or OFF	OFF	5	N/A	N/A	<i>Hint: This is an alternative to switch the display light ON or OFF, rather than using the slider switch on the right hand side of the radio, although 'OFF' in this mode is permanently off and 'ON' is the same as 'AUTO OFF' using the slider switch.</i> Press key '5' to toggle the display light ON or OFF
<b>Battery low voltage shutdown level</b>	Sets the Li-ion battery low voltage shutdown level to 3.4v, 3.5v, 3.6v or 3.7v	OFF	4	N/A	N/A	1. Press and hold key '4' and adjust with either tuning knob 2. Press key '4' to save the setting
<b>Radio Runtime</b>	Displays how long the radio has been on	OFF	VF/VM	N/A	N/A	1. Hold 'VF/VM' for approx. 2 seconds 2. You will now see how long the radio has been running since the last battery charge or reset, shows hours & minutes