

Connector assembly UHF-Plug




Cut the cable end perpendicularly

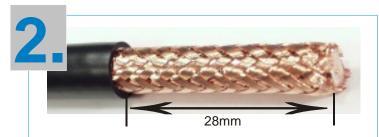


Remove 28 mm of the PVC sheath from the end of the cable with a knife.

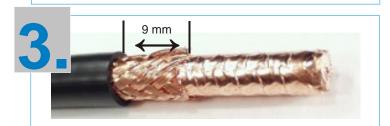

Shorten copper braid to 9mm.

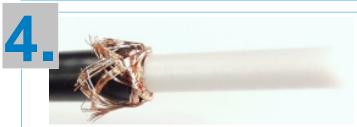

Bend copper braid back. Cut foil with a knife and remove completely.

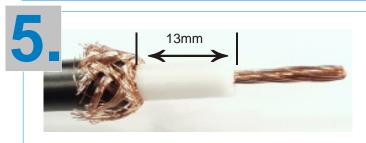

Remove dielectric up to 13 mm.



Push connector ferrule over cable end and tighten it by screwing it to stop.



Solder center conductor carefully through the little hole..





Screw connector housing over the inner part.